



GC550 Body Camera

User Manual

Preface

Welcome to the world of Hytera and thank you for purchasing this product. This manual includes a description of the functions and step-by-step procedures for use.

This manual is applicable to the following product:

[GC550 Body Camera](#)

Copyright Information

Hytera is the trademark or registered trademark of Hytera Communications Corporation Limited (the Company) in the People's Republic of China (PRC) and/or other countries or areas. The Company retains the ownership of its trademarks and product names. All other trademarks and/or product names that may be used in this manual are properties of their respective owners.

The product described in this manual may include the Company's computer programs stored in memory or other media. Laws in PRC and/or other countries or areas protect the exclusive rights of the Company with respect to its computer programs. The purchase of this product shall not be deemed to grant, either directly or by implication, any rights to the purchaser regarding the Company's computer programs. The Company's computer programs may not be copied, modified, distributed, decompiled, or reverse-engineered in any manner without the prior written consent of the Company.

Disclaimer

The Company endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technological development. No part of this manual may be copied, modified, translated, or distributed in any manner without the prior written consent of the Company.

We do not guarantee, for any particular purpose, the accuracy, validity, timeliness, legitimacy or completeness of the third-party products and contents involved in this manual.

If you have any suggestions or would like to receive more information, please visit our website at: <https://www.hytera.com>.






Contents

Documentation Information	1
1. What's in the Box	3
2. Know Your GC550.....	4
2.1 Product Layout	4
2.2 Key Function.....	4
2.3 Screen	5
2.4 LCD Icons	5
2.5 LED Indicator.....	6
3. Prepare Your GC550	7
3.1 Attach the Battery	7
3.2 Attach the Belt Clip.....	7
3.3 Charge the Battery	8
4. Get Started	9
4.1 Turn On or Off the GC550.....	9
4.2 Wakeup and Sleep	9
5. Use Your GC550	10
5.1 Record Videos	10
5.2 Record Audios	10
5.3 Take Photos	11
5.4 Play Back.....	11
5.4.1 Enter the Media Library.....	11
5.4.2 Play Back Videos	11
5.4.3 Play Back Photos	11
5.4.4 Play Back Audios	11
5.5 Emergency Recording.....	12
5.6 Flashlight	12
6. System Settings	13
6.1 Basics	13
6.2 Sound	14
6.3 Screen	14
6.4 Video.....	15
6.5 Photo	17
7. Collect Data from Your GC550.....	18
8. Troubleshooting.....	19
9. Care and Cleaning.....	21
10. Optional Accessories	22
11. Abbreviations	23

Documentation Information

Documentation Conventions

Instruction Conventions

Icon	Description
 TIP	Indicates information that can help you make better use of your product.
 NOTE	Indicates references that can further describe the related topics.
 CAUTION	Indicates situations that could cause data loss or equipment damage.
 WARNING	Indicates situations that could cause minor personal injury.
 DANGER	Indicates situations that could cause major personal injury or even death.

Notation Conventions

Item	Description	Example
Boldface	Denotes menus, tabs, parameter names, window names, dialogue names, and hardware buttons.	To save the configuration, click Apply .
		The Log Level Settings dialogue box appears.
		Press the PTT key.
" "	Denotes messages, directories, file names, folder names, and parameter values.	The screen displays "Invalid Battery!".
		Open "PSS.exe".
		Go to "D:/opt/local".
>	Directs you to access a multi-level menu.	In the Port text box, enter "22".
		Go to File > New .
		For details about using the DWS, refer to <i>Dispatch Workstation User Guide</i> .
<i>Italic</i>	Denotes document titles.	
Courier New	Denotes commands and their execution results.	To set the IP address, run the following command: vos-cmd - m name IP

Key Operations

- Press: To press a key and release it immediately.
- Long press: To press and hold the key for one second.
- Press and hold: To press a key and keep holding it down.

1. What's in the Box

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.


Item	Qty.	Item	Qty.
Body Camera	1	Power Adapter	1
Battery	1	USB Type-C Data Cable	1
Belt Clip	1	/	/

 **NOTE**

Figures in this manual are only for reference.

2. Know Your GC550


2.1 Product Layout

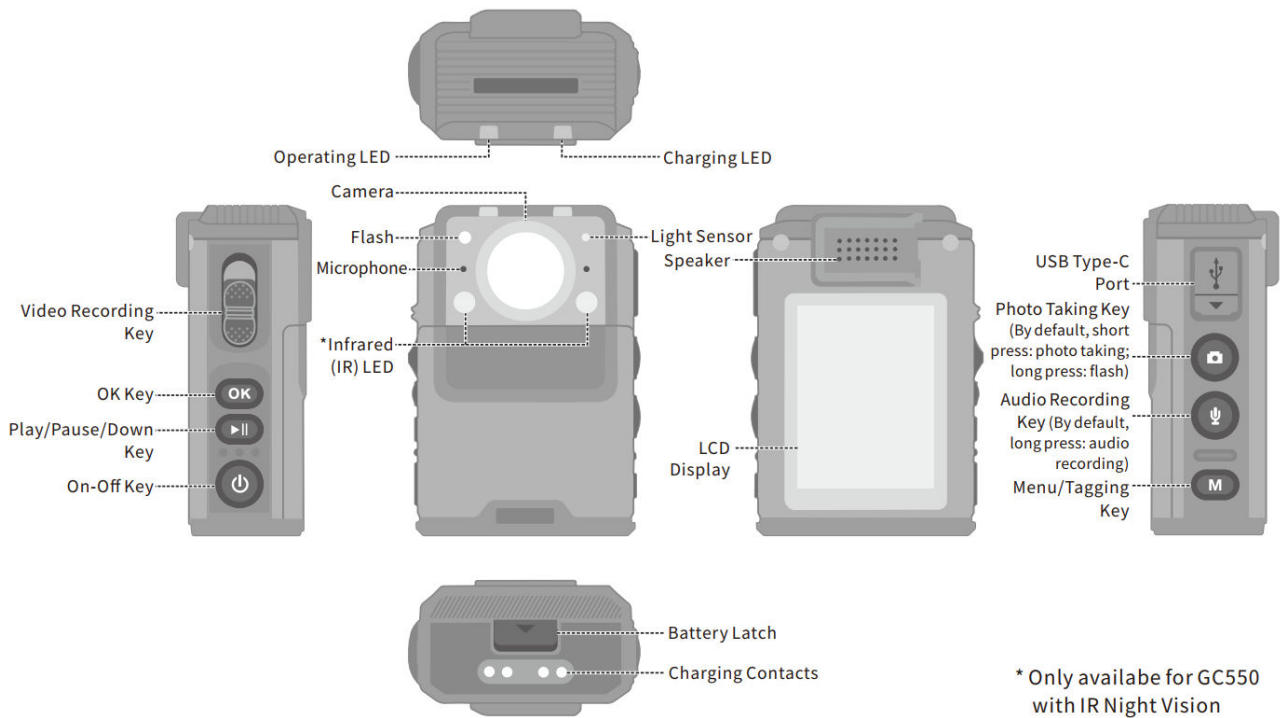



2.2 Key Function


You can learn about keys and their functions in the following table:

Key	Function (Short Press)	Function (Long Press)
	<ul style="list-style-type: none"> ● Confirm an action ● Fast forward a video ● Rewind a video 	/
	<ul style="list-style-type: none"> ● Play or pause a video or audio ● Move downward ● Zoom in or out 	Lock/Unlock
	Wake up the screen or make the screen go to sleep	Turn on or off the GC550
	Take a photo (by default)	Turn on or off the flashlight (by default)
	/	Start or stop recording an audio (by default)





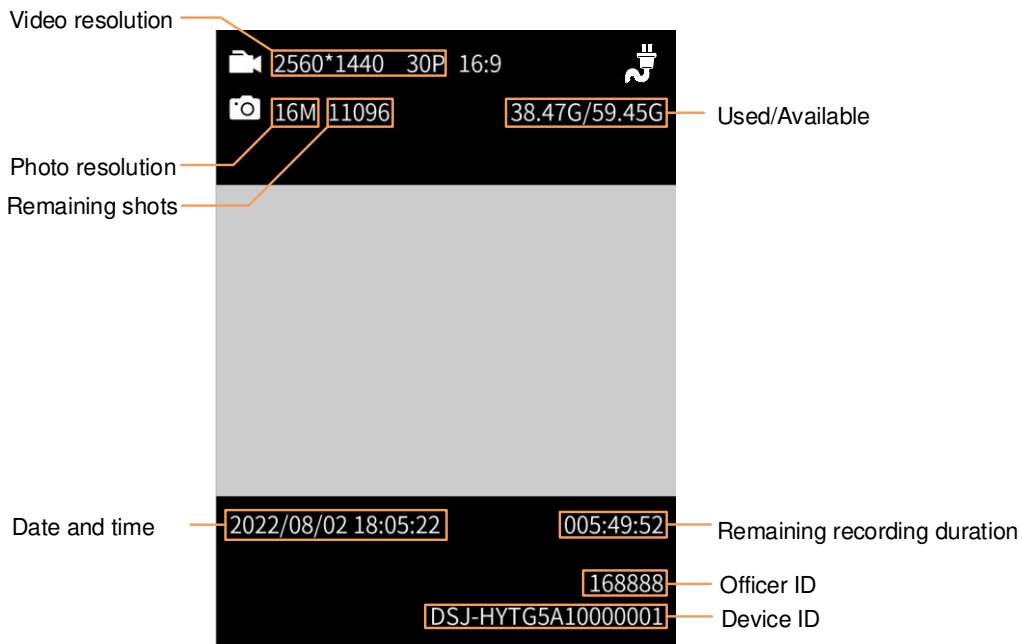

Key	Function (Short Press)	Function (Long Press)
	<ul style="list-style-type: none"> ● Enter the Settings interface ● Go back to the last interface ● Tag or untag the video or audio 	Start or stop emergency recording
Video Recording Key	<ul style="list-style-type: none"> ● Toggle down: start recording a video ● Toggle up: stop recording a video 	








For enhanced convenience, you can contact your dealer to program  and  as shortcuts to body camera features.

2.3 Screen



2.4 LCD Icons

Icon	Description
	The GC550 is being charged.
	The GC550 is fully charged.
	The GC550 is connected to WLAN.
	The GC550 fails to connect to WLAN.
	The GC550 is ready to record a video.
	The GC550 is recording a video.

Icon	Description
	The GC550 is in post-event recording status.
	The GC550 is in pre-event recording status.
	Photo taking is in standby status. The GC550 is ready to take a photo.
	The GC550 operates in the silent mode.
	Flashlight is enabled.
	The video is tagged.
	The GC550 is recording an emergency video.

2.5 LED Indicator

LED Indicator	Status	Description
Charging LED	Glows red	The GC550 is being charged and the battery power is below 90%.
	Glows green	The GC550 is fully charged.
Operating LED	Glows red	<ul style="list-style-type: none"> The GC550 is being turned on or off. The GC550 is in standby status and the battery power is low.
	Flashes red	The GC550 is recording a video.
	Glows green	The GC550 is in standby status.
	Flashes orange	The GC550 is recording an audio.
	Glows orange	Exception occurs in data transmission.
	Flashes green	The GC550 is transmitting data.
	Flashes red and green alternatively	The GC550 is being upgraded.

3. Prepare Your GC550


3.1 Attach the Battery

CAUTION

- Use only the Company's standard or optional battery. Polarity reverse or use of other batteries may result in explosion and fire hazards.
 - Dispose of used batteries in accordance with the "Recycling and Handling Safety Precautions" in the *Safety Information Manual*.
-


To attach the battery, do as follows:

1. Toggle down and hold the battery latch, and then press the battery cover backward to remove the cover.
2. Align the bottom of the battery with the top of the battery slot, with the metal contacts on the battery facing down.
3. Press the top of the battery down.
4. Push the battery cover back until you hear a click.

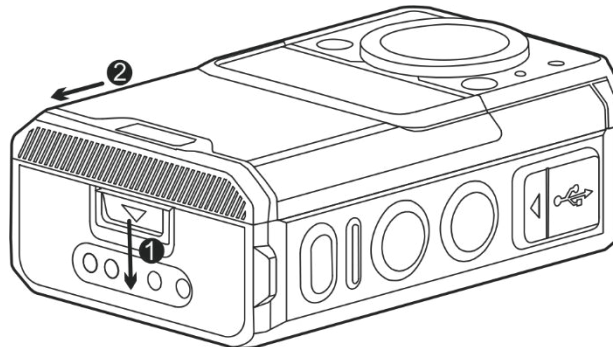

3.2 Attach the Belt Clip

To attach the belt clip, slide the belt clip leftwards to the slot.

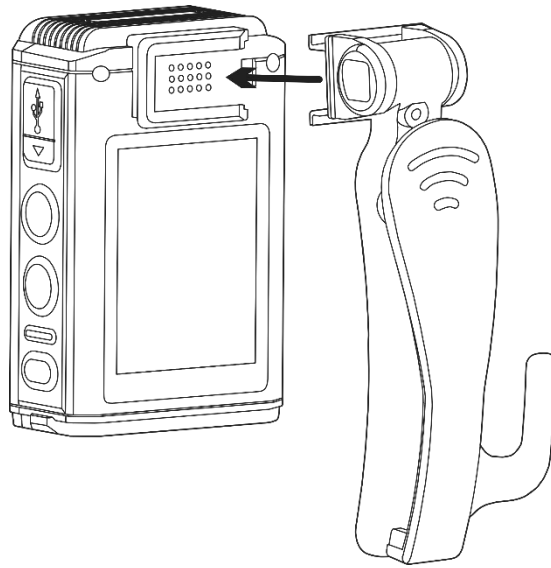


NOTE

To remove the belt clip, reverse the attaching step.

3.3 Charge the Battery


Connect the GC550 with the battery attached to power supply through the USB Type-C data cable and power adapter in the package.

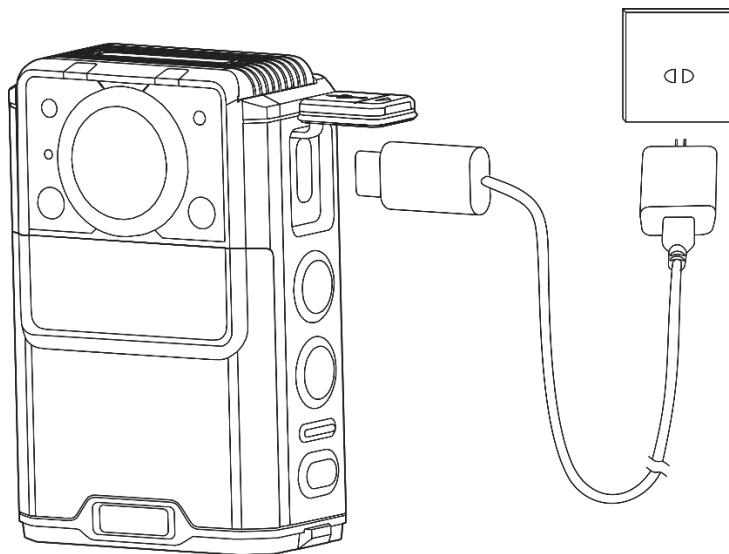

You can learn about the charging status from the charging LED indicator. For details, see [2.5 LED Indicator](#).

4. Get Started


4.1 Turn On or Off the GC550

To turn on or off the product, long press .

After being turned on, the GC550 enters the preview mode.


4.2 Wakeup and Sleep

Wakeup

To wake up the screen, press .

Sleep

You can manually make the screen go to sleep or let the screen automatically go to sleep.

- Manually
Press .
- Automatically

Set the automatic sleep time according to [Sleep](#) in [6.3 Screen](#).

When the GC550 remains idle over the preset sleep time, the screen goes to sleep automatically.

4.3 Lock and Unlock




You can long press long press  to lock or unlock the screen.

5. Use Your GC550

5.1 Record Videos

- Normal recording
 - a. To start recording, in the preview mode, toggle the **Video Recording** key downwards.
 - b. To stop recording, toggle the **Video Recording** key upwards.
- One-touch power-on and recording
 - a. In power-off mode, toggle the **Video Recording** key downwards.
The GC550 is turned on and starts recording.
 - b. To stop recording, toggle the **Video Recording** key upwards.
- Strike recording
 - a. (Optional) Set the sensitivity of the G sensor according to [6.4 Video](#).
After detecting a strike, the GC550 automatically starts recording.
 - b. To stop recording, toggle the **Video Recording** key downwards and then upwards.
- Motion detection recording
 - a. Enable Motion Detection according to [6.4 Video](#).
After detecting rapid motion, the GC550 automatically starts recording.
 - b. To stop recording, toggle the **Video Recording** key downwards and then upwards.

During recording, you can do any of the following:




- To tag or untag the video, long press .
- To take a snapshot, press .
- To zoom in or zoom out, press .

You can zoom in the picture to 2x, 4x, 8x, 16x, 32x, 64x, or 128x.


NOTE

You can set Pre-event Record, Post-event Record, Split Time, and more. For details, see [6.4 Video](#).

5.2 Record Audios

1. To start recording, in the preview mode, long press .
2. (Optional) Press  to tag the audio as key evidence or untag the audio.
3. To stop recording, long press  again.

5.3 Take Photos





In the standby status or the preview mode, press .

NOTE








You can set Photo-taking Timer, Auto Photo-taking, and Burst Shot. For details, see [6.5 Photo](#).

5.4 Play Back






5.4.1 Enter the Media Library

1. In the preview mode, press  to enter the password authentication interface.
2. Enter the password (initial password: "000000").
 - a. Press  to select a character, and then press .
 - b. Repeat step a. until all characters are entered.
3. Press .





5.4.2 Play Back Videos


1. In the **Media Library** interface, select **VIDEO**, and then press .
2. Press  to select the video, and then press .
3. Do any of the following:
 - To pause the video, press .
 - To fast forward the video, press .
 - You can press  multiple times to adjust the playback speed to 2x, 4x, 6x, 8x, or 16x.
 - To rewind the video, adjust the playback speed to 16x, and then press  again.

5.4.3 Play Back Photos


1. In the **Media Library** interface, press  to select **PHOTO**, and then press .
2. Press  to select the photo, and then press .
3. (Optional) Press  to view the next photo.

5.4.4 Play Back Audios

1. In the **Media Library** interface, press  to select **AUDIO**, and then press .
2. Press  to select the audio, and then press .

3. (Optional) To pause the audio, press .

5.5 Emergency Recording

To start or stop an emergency recording, long press .

5.6 Flashlight

To enable or disable Flashlight, long press .

6. System Settings

In the preview mode, press **(M)** to enter the **Settings** interface, and then configure the following parameters according to actual conditions.

6.1 Basics

Language

You can set the interface language to **English** or **简体中文** (Simplified Chinese).

1. Press **(▶||)** to select **Language**, and then press **(OK)**.
2. Press **(▶||)** to select the language, and then press **(OK)**.

Auto Power-Off

To disable Auto Power-off, or set the auto power-off time, do as follows:

1. Press **(▶||)** to select **Auto Power-Off**, and then press **(OK)**.
2. Press **(▶||)** to select **Off**, **1 Min**, **3 Min**, or **5 Min**, and then press **(OK)**.

Silent Mode

With Silent Mode enabled, the GC550 gives no audible alerts, the indicator does not light, and the screen goes dimmest to keep the GC550 unnoticeable.

To enable or disable Silent Mode, do as follows:

1. Press **(▶||)** to select **Silent Mode**, and then press **(OK)**.
2. Press **(▶||)** to select **On** or **Off**, and then press **(OK)**.

Reset

To reset the GC550 to factory settings, do as follows:

1. Press **(▶||)** to select **Reset**, and then press **(OK)**.

The screen displays **Need reboot!**.

2. Press **(▶||)** to select **○**, and then press **(OK)**.



Account

You can view the user name, user ID, unit name, and unit ID.

To view account information, press **(▶||)** to select **Account**, and then press **(OK)**.

Device Information





You can view the device name, device ID, serial number (SN), storage capacity (total space and available space), main chip, and software version.

To view device information, press  to select **About Device**, and then press .

6.2 Sound





Tone

To set system tone, do as follows:

1. Press  to select **Tone**, and then press .
2. Press  to select **Off**, **Voice broadcast**, or **On**, and then press .





Key Tone

To enable or disable Key Tone, do as follows:

1. Press  to select **Key Tone**, and then press .
2. Press  to select **On** or **Off**, and then press .





Volume

To set system volume, do as follows:

1. Press  to select **Volume**, and then press .
2. Press  to select **Off**, **Low**, **Medium**, or **High**, and then press .

Vibration





To enable or disable Vibration, do as follows:

1. Press  to select **Vibration**, and then press .
2. Press  to select **On** or **Off**, and then press .

6.3 Screen

Brightness





To adjust screen brightness, do as follows:

1. Press  to select **Brightness**, and then press .
2. Press  to select **High**, **Middle**, or **Low**, and then press .

Sleep

If the GC550 remains idle over the preset sleep time, the screen automatically goes off to save battery power.

To set sleep, do as follows:





1. Press  to select **Sleep**, and then press .
2. Press  to select **Off**, **10 SEC**, **20 SEC**, or **30 SEC**, and then press .

6.4 Video

Video Resolution





You can set the video resolution to **2560 x 1440 30P**, **1920 x 1080 30P**, **1280 x 720 30P**, or **848 x 480 30P**. The higher the resolution is, the larger the video file is.

To set video resolution, do as follows:

1. Press  to select **Video Resolution**, and then press .
2. Press  to select the resolution, and then press .





Video Quality

To set video quality, do as follows:

1. Press  to select **Video Quality**, and then press .
2. Press  to select **High**, **Medium**, or **Low**, and then press .

Video Encoding Format

To set video encoding format, do as follows:

1. Press  to select **Video Encode Format**, and then press .
2. Press  to select **G1.0** or **G2.0**, and then press .





Pre-event Recording

Pre-event Recording enables the GC550 to capture a period time of footage before you toggle the **Video Recording** key downwards.

Pre-event recording time differs under different video resolutions:

Video Resolution	Maximum Pre-event Recording Time
2K	10s
1080p	15s
720p	20s
480p	30s





To enable or disable Pre-event Recording, do as follows:

1. Press  to select **Pre-event Record**, and then press .
2. Press  to select **On** or **Off**, and then press .

Post-event Recording

Post-event Recording enables the GC550 to continue to record for a preset duration after you toggle the **Video Recording** key upwards.





To set post-event recording, do as follows:

1. Press  to select **Pre-event Record**, and then press .
2. Press  to select **Off, 10 Sec, 20 Sec, 30 Sec, 1 Min, 2 Min, or 30 Min**, and then press .

Motion Detection

With Motion Detection enabled, after detecting the rapid motion, the GC550 automatically starts recording. When the picture is back to the stable state, the recording will continue for 15 seconds and then stop automatically.

To enable or disable Motion Detection, do as follows:

1. Press  to select **Motion Detection**, and then press .
2. Press  to select **On or Off**, and then press .





Sensitivity of the G Sensor

To set the sensitivity of the G sensor, do as follows:

1. Press  to select **G Sensor Sensitivity**, and then press .
2. Press  to select **Off, High, Mid, or Low**, and then press .

IR LED

To disable or enable IR LED, do as follows:





1. Press  to select **IR LED**, and then press .
2. Press  to select **Off, On, or Auto**, and then press .

In the Auto mode, the GC550 automatically turns on the IR LED when it detects low ambient light during recording.

Split Time

Split Time allows you to set the duration of every video clips. If the recording time is more than what you set, the video will be stored in clips. For example, if you set the duration to 5 minutes and then you record for 15 minutes, you will get three video clips each of which lasts 5 minutes.





To set split time, do as follows:

1. Press  to select **Split Time**, and then press .
2. Press  to select **5 Min, 10 Min, or 15 Min**, and then press .

Auto Storage Cleanup

With Auto Storage Cleanup enabled, the GC550 will clear the earliest untagged videos to save the latest videos when the storage is full.

To enable or disable Auto Storage Cleanup, do as follows:

1. Press  to select **Auto Storage Cleanup**, and then press .
2. Press  to select **On** or **Off**, and then press .

6.5 Photo

Photo Resolution





You can set the photo resolution to **4 M**, **8 M**, **16 M**, **32 M**, or **40 M**. The higher the resolution is, the larger the photo file is.

To set photo resolution, do as follows:

1. Press  to select **Photo Resolution**, and then press .
2. Press  to select the resolution, and then press .

Photo-taking Timer

To set photo-taking timer, do as follows:

1. Press  to select **Photo-taking Timer**, and then press .
2. Press  to select **Off**, **5 Sec**, or **10 Sec**, and then press .





Auto Photo-taking

To set auto photo-taking, do as follows:

1. Press  to select **Auto Photo-taking**, and then press .
2. Press  to select **Off**, **5 Sec**, or **10 Sec**, and then press .

Burst Shot


To set burst shot, do as follows:

1. Press  to select **Burst Shot**, and then press .
2. Press  to select **Off**, **2**, **3**, **5**, or **10**, and then press .

7. Collect Data from Your GC550

You can switch the GC550 into disk mode through the BWC Manager, and then copy photos, audios, and videos to your PC. For details on the operations, in the upper right corner of the BWC manager interface, click **Help**.

To connect the GC550 to your PC, do as the following figure:

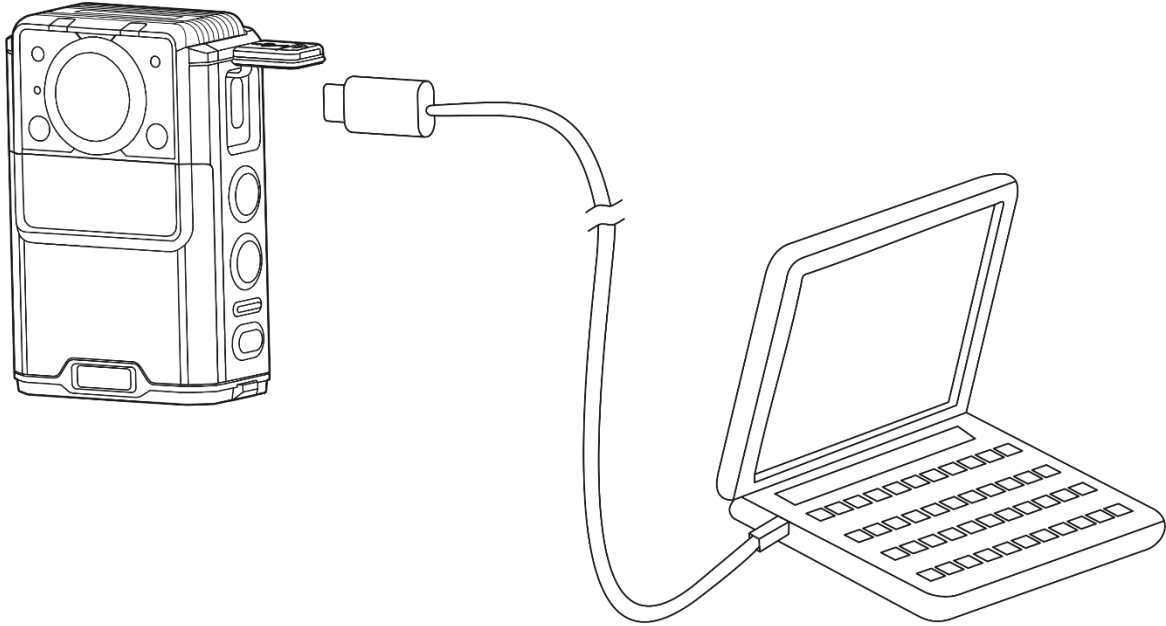

8. Troubleshooting

Phenomena	Analysis	Solution
The product cannot be turned on.	The battery may be improperly attached.	Reattach the battery.
	The battery may run out.	Recharge or replace the battery.
	The battery and the charging probes are in poor contact due to dirtied or damaged battery contacts.	Clean the battery contacts.
The volume is low when you play back audios or videos.	The microphone or the speaker may be blocked or damaged.	Clean the microphone or the speaker.
The GC550 cannot record videos.	The storage may be full.	<ul style="list-style-type: none"> ● Back up the data according to 7. Collect Data from Your GC550, and then delete the data from the GC550. ● Enable the Auto Storage Cleanup feature.
The GC550 cannot take photos or record audios.	The storage may be full.	Back up the data according to 7 . Collect Data from Your GC550, and then delete the data from the GC550.
The GC550 cannot perform pre-event or post-event recording.	The Pre-event Recording or Post-event Recording feature may be not configured.	Configure the corresponding feature through the BWC Manager.
The GC550 does not turn on the IR LED automatically when recording a video in dark environment.	The IR LED feature may be not enabled.	Enable the IR LED feature.
The GC550 gives no alert tone, the indicator does not light up, and the screen goes dimmest.	The Silent Mode may be enabled.	Disable the Silent Mode.

The GC550 gives no response to operations.	The GC550 may be crashed.	Remove and reattach the battery, and then turn on the GC550.
--------------------------------------------	---------------------------	--------------------------------------------------------------

If the above solutions cannot fix the problems, or you may have some other queries, please contact us or your local dealer for more technical support.

9. Care and Cleaning

To guarantee optimum performance as well as a long service life of the product, please follow the tips below.

Product Care

- Do not pierce or scrape the product.
- Keep the product away from substances that can corrode the circuitry.
- Do not hold the product by the connection cable.
- Keep the USB Type-C port covered when it is not in use.

Product Cleaning

CAUTION

- Turn off the product and remove the battery before cleaning.
 - Make sure the product is completely dry before use.
-
- Clean up the dust and fine particles on the product's surface with a clean and dry lint-free cloth or a brush regularly.
 - Use neutral cleanser and a non-woven fabric to clean the keys and surface after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations, so as to avoid surface damage.

10. Optional Accessories

 **CAUTION**

Use the accessories specified by the Company only. Otherwise, we shall not be liable for any losses or damages arising out of the use of any unauthorized accessories.

Contact your local dealer for the optional accessories of the product.

11. Abbreviations

Abbreviation	Full Name
LED	Light Emitting Diode
USB	Universal Serial Bus
WLAN	Wireless Local Area Networks



is the trademark or registered trademark of Hytera Communications Corporation Limited.

© 2023 Hytera Communications Corporation Limited. All Rights Reserved.

Address: Hytera Tower, Hi-Tech Industrial Park North, 9108# Beihuan Road, Nanshan District,
Shenzhen, People's Republic of China

Postcode: 518057

<https://www.hytera.com>